

BRAKE BLEEDING KIT

INSTRUCTIONS


BRAKE BLEEDING AND CHANGING BRAKE FLUID

1. Connect the brake bleeder to compressed air supply. Min 80psi - Max 130psi
 2. Check the level of brake fluid in the reservoir and add fluid if necessary. If fluid is being changed, evacuate reservoir and fill with new fluid.
 3. Mount the rubber fitting on to the bleed screw/valve and hang bleeder unit at a point higher than the bleed screw/valve and hang bleeder unit
 4. Ensure tap is in the "ON" position.
Activate trigger of brake bleeder and hold for 3 to 4 seconds to allow full vacuum to build in canister. With trigger held on, open bleed screw/valve and fluid will be drawn from the system.
 5. Allow fluid to be drawn until new fluid is visible, close and tighten bleed screw/valve and remove the rubber fitting - when the hose is empty release the trigger.
 6. Repeat the above procedure at each wheel.
- NOTE: Refer to specific procedures and instructions from the vehicle manufacturers Service Manual**
7. At completion of bleeding, turn tap to "OFF" position.

! Remove and empty canister to prevent accidental fluid spillage.

IMPORTANT NOTES

- Check and maintain the level of brake fluid in the reservoir after each wheel.
- Before bleeding, remove and clear bleed screw, apply copper or silicone grease to minimise air leaks around the bleed screw thread and to prevent seizing in place.
- Vacuum bleeding may cause a small amount of air to be drawn past the brake bleed screw thread giving the operator a false impression that air is being drawn from the system. This does not effect bleeding of the brake system.
- After bleeding, check brake performance.
- When cleaning the gun please use water only. **DO NOT** use solvents as damage to O-Rings may occur.

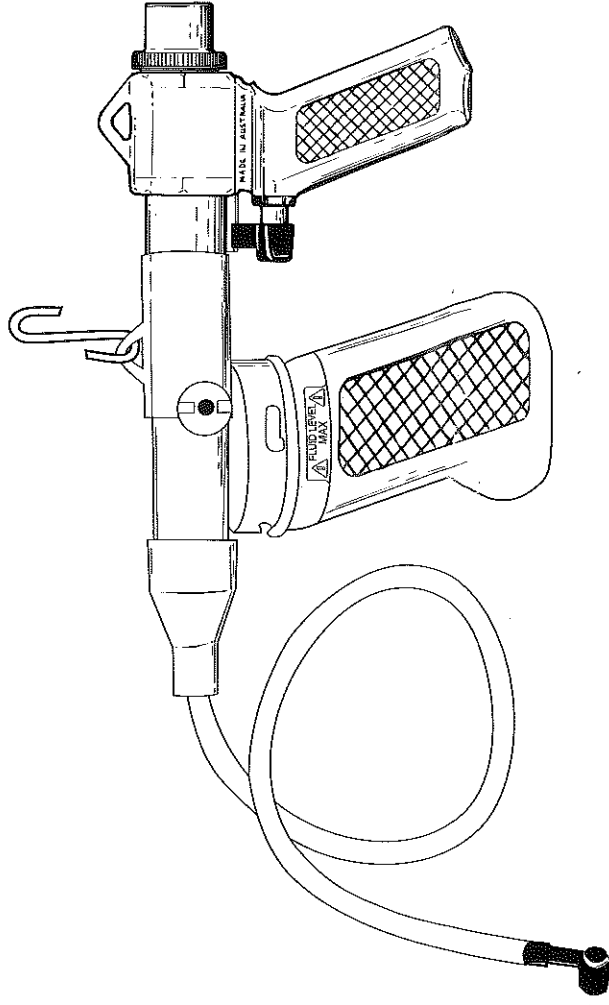

**Do not exceed Maximum Fluid Level warning on canister.
Once Max level is reached, empty canister.**

! WARNING

Keep Brake Bleeder Unit in upright position at all times. Failure to do so may result in fluid exhausting from rear of gun.

Do not use for purposes other than Brake Bleeding.

**! Not to be used with flammable liquids.
Not to be used with hot liquids.**



Wear eye protection