 


KINCROME

PT18

18V Brushless Jigsaw

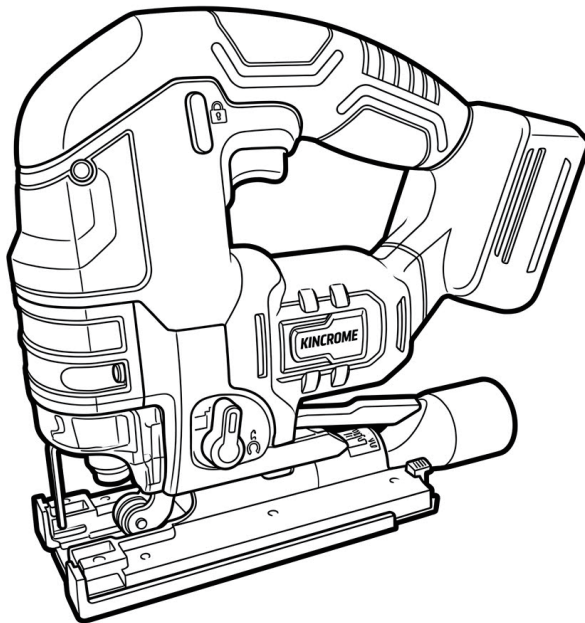

K23027

ED1 March 2026

General Power Tool Safety Warnings

K23027



WARNING Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference. The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.**
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.**

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.

- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
 - g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
 - h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.
- ## 4) Power tool use and care
- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
 - b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
 - c) **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
 - d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
 - e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation.** If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
 - f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
 - g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
 - h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5) Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b) **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact.** If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- e) **Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- f) **Do not expose a battery pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 130 °C may cause explosion.

NOTE: The temperature 130 °C can be replaced by the temperature 265 °F.

- g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

6) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
- b) **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.

Safety instructions for Jigsaw Saw

- a) **Hold the power tool by the insulated gripping surfaces when performing an operation where the cutting accessory may contact hidden wiring or its own cord.** The cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and shock the operator.
- b) **Use clamps or another practical way to secure and support the workpiece to a stable platform.** Holding the workpiece by hand or against your body leaves it unstable and may lead to loss of control.
- c) **Keep hands away from the sawing area. Do not grip under the workpiece.** Risk of injury if contact is made with the saw blade!
- d) **Make sure the cutting support always rests on the workpiece when sawing.** The saw blade may snag, causing the operator to lose control of the power tool.
- e) **After completing the cutting operation, switch off the power tool and withdraw the saw blade from the cut only after the blade has come to a complete stop.** In this way, you will avoid any kickback and you can now safely put the power tool down.

- f) **Use only undamaged saw blades that are in perfect condition.** Bent or blunt saw blades may break or cause a kickback.
- g) **After switching off, do not attempt to brake the saw blade by applying lateral counter pressure.** The saw blade may incur damage, break or cause a kickback.
- h) **When working, hold the power tool firmly with both hands and ensure that you have a secure footing.** The power tool is controlled more securely if held with both hands.

The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.



To reduce the risk of fire, personal injury, and product damage due to a short circuit, never immerse your tool, battery pack or charger in fluid or allow a fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach-containing products, etc., can cause a short circuit.

It has been reported that vibrations generated by handheld tools may contribute to the development of Raynaud's Phenomenon (often called Raynaud's Syndrome) in susceptible individuals.

Symptoms and Contributing Factors

Symptoms of this condition typically affect the fingers and may include:

- Tingling
 - Numbness
 - Blanching (fingers turning pale or white)
- These symptoms are usually most apparent upon exposure to cold.

The development of these symptoms is thought to be multi-factorial, with contributions from:

- Hereditary predisposition
- Exposure to cold and dampness
- Diet
- Smoking
- Work practices

Measures to Potentially Reduce Vibration Effects

Operators can take the following proactive measures to possibly mitigate the effects of vibration exposure:

Maintain Warmth: Keep the body warm in cold weather. Specifically, wear gloves during product operation to maintain warmth in the hands and wrists, as cold weather is a major factor contributing to Raynaud's Phenomenon.

Promote Circulation: After each period of operation, perform exercises designed to increase blood circulation

Limit Exposure: Take frequent work breaks to reduce the amount of daily exposure to vibration.


Symbols

K23027

The rating plate on your tool may show symbols. These represent important information about the product or instructions on its use.

VDC	Voltage direct current, DC		Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.
	Refer to instruction manual/booklet		
	Wear ear protection		General warning
	Wear eye protection		Regulator compliance mark
SPM	Strokes per min		

 Know Your Product

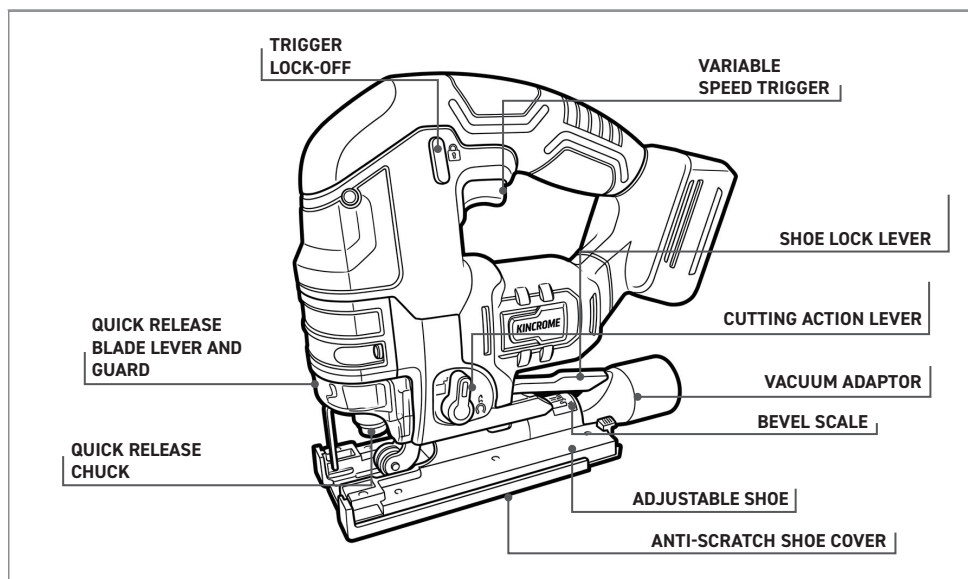


Specifications


Voltage	18VDC	Max. Cutting Capacity	Soft wood: 135mm Steel: 10mm Aluminium: 18mm
No Load Speed	0-2,800 spm	Weight	2.56kg
Stroke length	26mm		
Bevel Capacity	Bevel Angles -45° / 0° / 45°		

How To Insert Battery On Tool

 
K23027

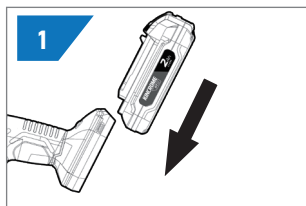

 1. ALIGN BATTERY RIBS WITH TOOL.

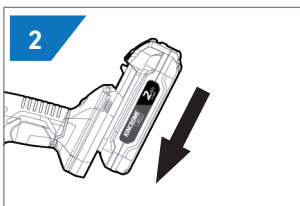


 2. SLIDE INTO TOOL.

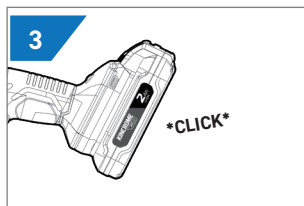


3. STOP WHEN YOU HEAR IT CLICK IN PLACE.

 Fitting the Cutting Blade

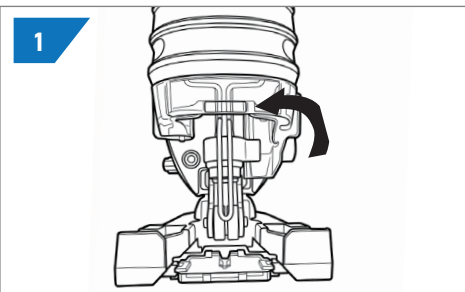

WARNING! Ensure the tool is switched off and battery is removed before performing any of the following tasks.

 
1. WHILE HOLDING THE SAW, ROTATE THE QUICK RELEASE BLADE LEVER AND GUARD CLOCKWISE AND HOLD IN POSITION.

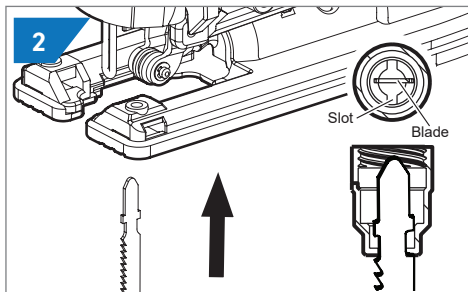


2. WHILE HOLDING THE QUICK RELEASE BLADE LEVER AND GUARD IN PLACE, INSERT THE JIGSAW SAW BLADE INTO THE SLOT, THE TEETH CAN EITHER FACE UP OR DOWN DEPENDING ON INTENDED USE. ONCE THE BLADE IS IN PLACE RELEASE THE QUICK RELEASE BLADE LEVER AND GUARD. ENSURE THE BLADE IS SECURE AND WON'T FALL OUT.

 Removing the Cutting Blade

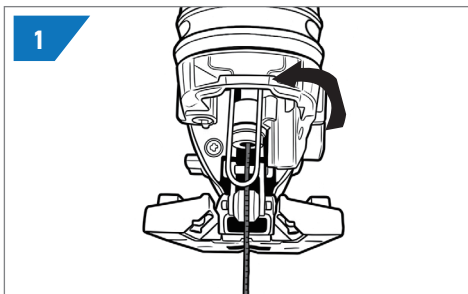
WARNING! Ensure the tool is switched off and battery is removed before performing any of the following tasks.

 
1. WHILE HOLDING THE SAW, RELEASE THE QUICK RELEASE BLADE LEVER AND GUARD. CAUTION: BEWARE THE CHUCK IS SPRING LOADED AND THE BLADE WILL EJECT FROM THE CHUCK.

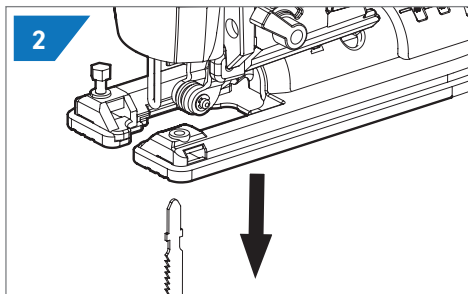

2. WHILE HOLDING THE QUICK RELEASE BLADE LEVER AND GUARD IN PLACE, REMOVE THE JIGSAW SAW BLADE FROM THE SLOT. ONCE THE BLADE IS REMOVED, RELEASE THE QUICK RELEASE BLADE LEVER AND GUARD.

 
Operation

K23027




WARNING! Ensure the tool is switched off and battery is removed before performing any of the following tasks.


How To Adjust the Adjustable Shoe

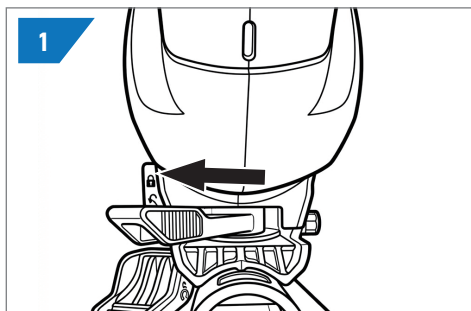

 
1. UNLOCK THE SHOE BY PUSHING THE SHOE LOCK LEVER TO THE LEFT.

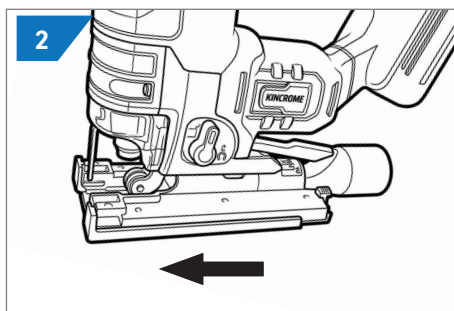

 2. SLIDE THE SHOE FORWARD TO RELEASE IT FROM THE 0° POSITIVE STOP POSITION.

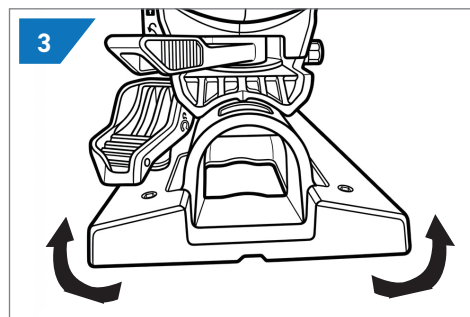


 3. THE SHOE CAN BE BEVELED TO THE LEFT OR TO THE RIGHT AND HAS DETENTS AT 15°, 30° AND 45°. THE SHOE CAN BE MANUALLY STOPPED AT ANY DEGREE BETWEEN 0° AND 45°.

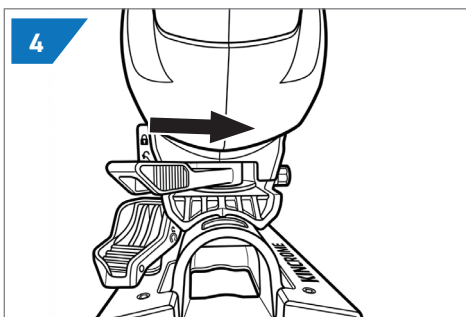


4. LOCK THE SHOE INTO PLACE BY PUSHING THE SHOE LOCK LEVER TO THE RIGHT.

 How To Adjust the Adjustable Shoe

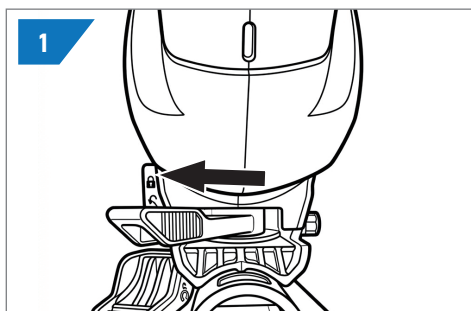

 1. UNLOCK THE SHOE BY PUSHING THE SHOE LOCK LEVER TO THE LEFT.

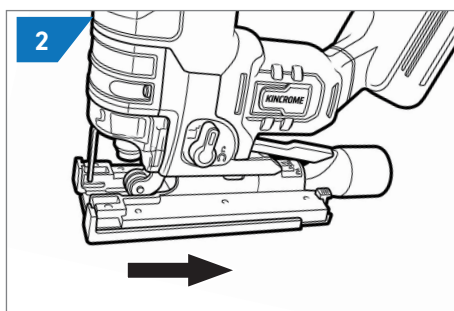


2. SLIDE THE SHOE BACK INTO THE 0° POSITIVE STOP POSITION AND LOCK THE SHOE.

Turning on The Jigsaw

K23027




 WARNING! Ensure the tool is switched off and battery is removed before performing any of the following tasks.

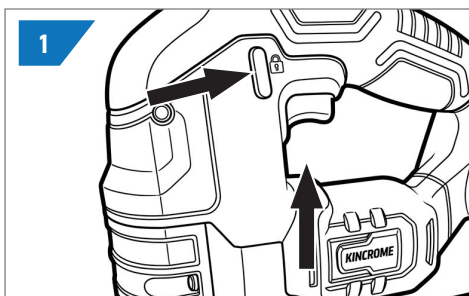


1. WHILE HOLDING THE SAW, PUSH THE TRIGGER LOCK-OFF, THEN PULL THE VARIABLE SPEED TRIGGER.

 Assembling the Parallel Guide

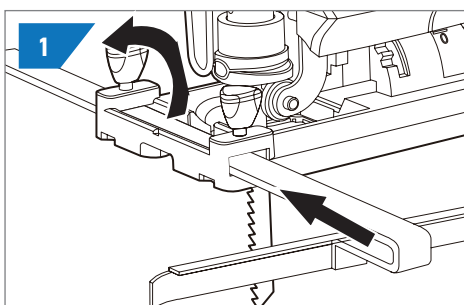


 1. UNSCREW THE GUIDE LOCKING SCREWS AT THE FRONT OF THE JIGSAW. INSERT THE PARALLEL GUIDE THROUGH THE SLOTS ON THE LEFT OR RIGHT SIDE OF THE SHOE.

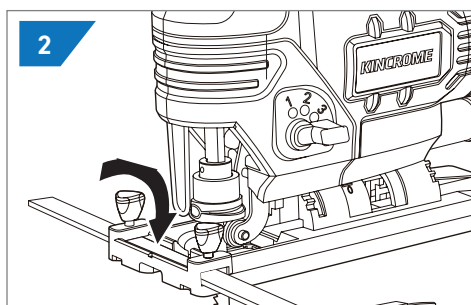


2. ADJUST THE PARALLEL GUIDE TO THE DESIRED LENGTH AND TIGHTEN THE PARALLEL GUIDE LOCKING KNOB.

 Assembling and Removing the Vacuum Adaptor

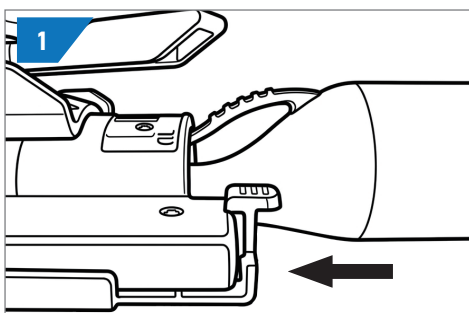

 1. FIT THE DUST EXTRACTION ADAPTOR TO THE JIGSAW BY PUSHING IT INTO ITS SLOT FROM THE BACK UNTIL IT LOCKS IN PLACE.

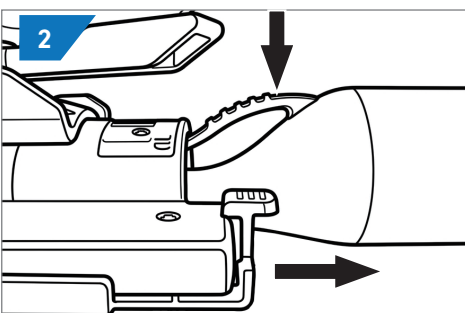


2. PUSH THE RELEASE LEVER AND SLIDE THE VACUUM ADAPTOR FROM THE BACK OF THE JIGSAW.

Cutting Action


K23027

This jigsaw is equipped with four cutting actions, three orbital and one straight. Orbital action has a more aggressive blade motion and is designed for cutting in soft materials like wood or plastic. Orbital action provides a faster cut, but with a less smooth cut across the material.

 NOTE: Metal or hardwoods should never be cut in orbital action.

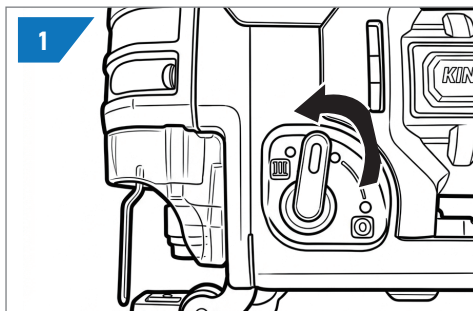

 1. TO ADJUST THE CUTTING ACTION MOVE THE CUTTING ACTION LEVER BETWEEN THE CUTTING POSITIONS: 1, 2, AND 3.

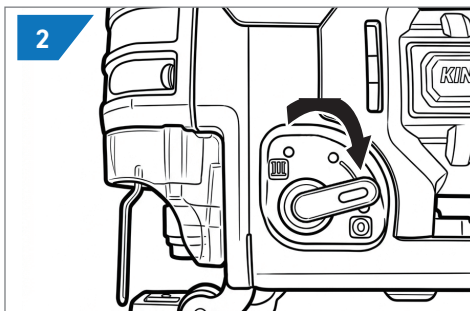


2. FOR STRAIGHT CUTTING POSITION THE ACTION LEVER TO 0.

MATERIAL	ORBITAL ACTION
WOOD	0-3
METAL	0-1
ALUMINUM	0-1
SMOOTH CUT	0


Blower Function

The dust blower helps clear the cutting area of debris created from the blade.

 NOTE: When cutting metal, turn the dust blower off so cutting fluids are not blown away from the blade.

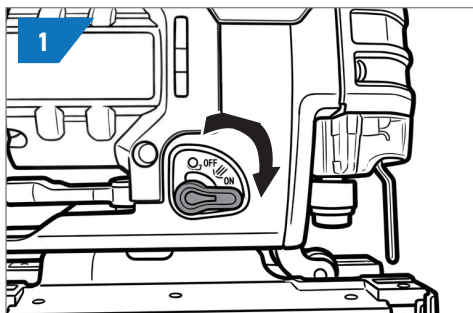

 1. TO TURN THE DUST BLOWER ON, SLIDE THE DUST BLOWER CONTROL ALL THE WAY TO THE BOTTOM.

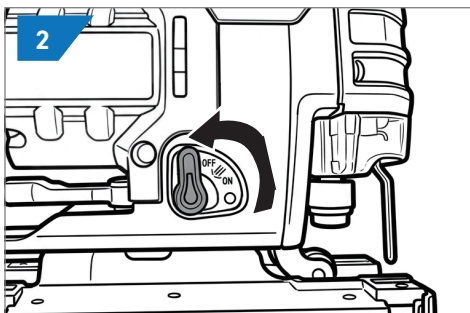


2. TO TURN THE DUST BLOWER ON, SLIDE THE DUST BLOWER CONTROL (H) ALL THE WAY TO THE BOTTOM.


Anti-Scratch Shoe Cover

K23027

 The anti-scratch shoe cover should be used when cutting surfaces that scratch easily, such as laminate, veneer, or paint

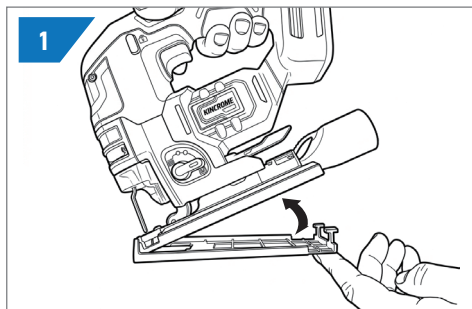

 1. TO FIT THE ANTI-SCRATCH SHOE COVER, PLACE THE FRONT OF THE SHOE INTO THE FRONT OF THE ANTI-SCRATCH SHOE COVER AND LOWER THE JIGSAW.

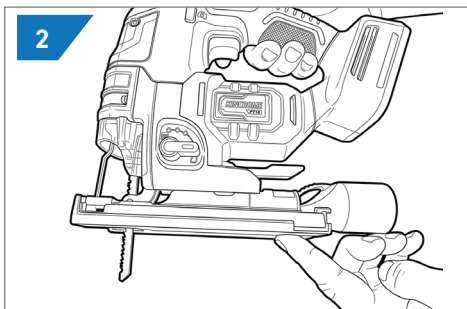


2. TO REMOVE ANTI-SCRATCH SHOE COVER, GRASP THE ANTI-SCRATCH SHOE COVER FROM THE BOTTOM; PUSHING ONTO THE TWO REAR TABS REMOVE THE ANTI-SCRATCH SHOE COVER SHOE COVER.


Anti-Splinter Insert

NOTE: Do not use the anti-splinter insert with the flush cutting blade.

 The anti-splinter insert should be used when trying to minimize tear-out, especially when cutting veneer, laminate, or finished surfaces, such as paint. The anti-splinter insert should be installed into the anti-scratch shoe cover.

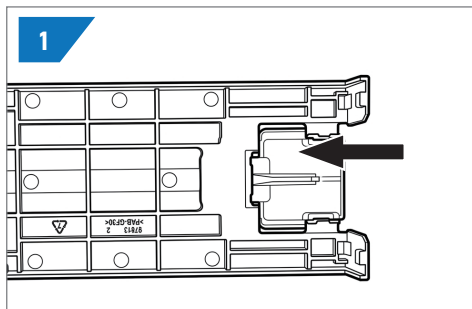

 1. SLIDE THE FRONT OF THE ANTI- SPLINTER INSERT INTO THE RECESS ON THE ANTI-SCRATCH SHOE COVER.

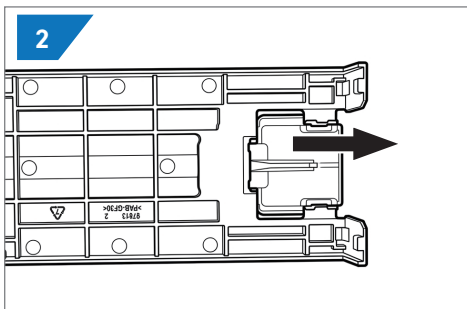


2. PULL THE FRONT OF THE ANTI- SPLINTER INSERT OUT OF THE RECESS ON THE ANTI-SCRATCH SHOE COVER.

Cutting

K23027
1



1. ENSURE SAFETY

 Always wear safety glasses when working with the angle grinder. Make sure to secure your hair and any baggy clothes. In appropriate situations make sure you wear ear muffs, a mask or a respiratory mask.

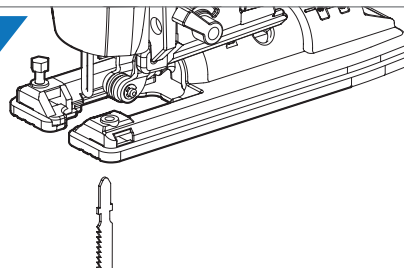2

 
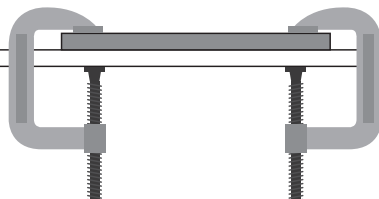 
2. MAKE SURE YOU HAVE THE RIGHT BLADE

Ensure the shoe is in the correct location, the shoe lock lever is in the closed position and the blade is inserted correctly and securely.

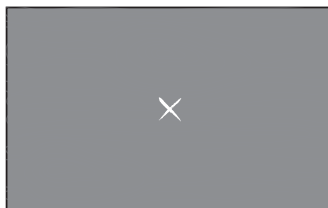3


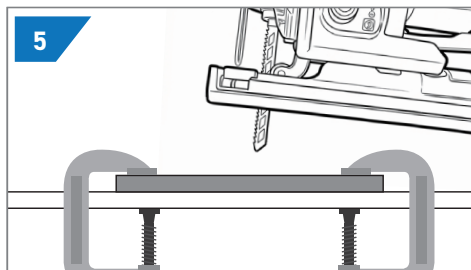 
3. MEASURE TWICE, CUT ONCE

Make sure your workpiece is securely fastened. Ensure that the saw depth, bevel and rip fence (if attached) are set up correctly and the safety guards are in their correct position. Have your job planned and marked out.

4


4. SECURE WORKPIECE

Make sure your workpiece is securely fastened to the surface to ensure no movement when cutting.

5


5. CUT YOUR WORKPIECE

 
Start with the blade off the workpiece you are cutting. Hold the Jigsaw saw securely and place the base onto the workpiece with the blade away from the edge. Turn on the jigsaw, then slowly move the blade towards the intended cut. Start the cut and continually apply light pressure in the cutting direction while allowing the sawblade to do the majority of the work.

Plunge Cutting

K23027
1



1. ENSURE SAFETY

Always wear safety glasses when working with the angle grinder. Make sure to secure your hair and any baggy clothes. In appropriate situations make sure you wear ear muffs, a mask or a respiratory mask.

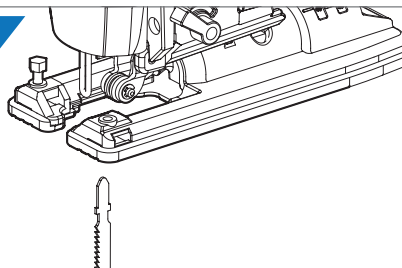2

 
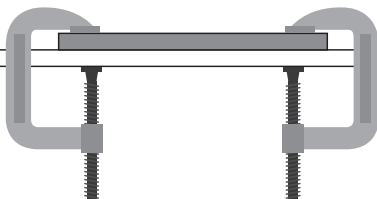 
2. MAKE SURE YOU HAVE THE RIGHT BLADE

Ensure the shoe is in the correct location, the shoe lock lever is in the closed position and the blade is inserted correctly and securely.

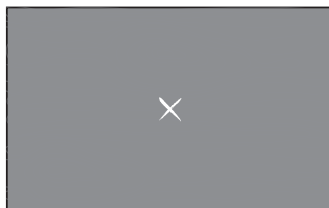3


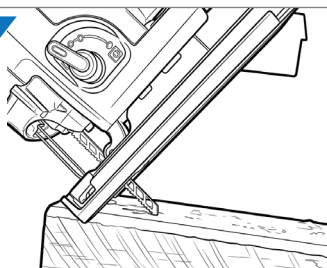 
3. MEASURE TWICE, CUT ONCE

Make sure your workpiece is securely fastened. Ensure that the saw depth, bevel and rip fence (if attached) are set up correctly and the safety guards are in their correct position. Have your job planned and marked out.

4


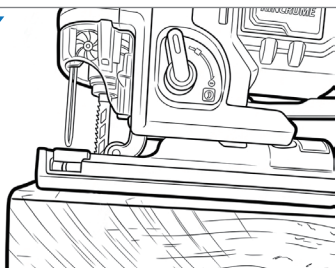 
4. SECURE WORKPIECE

Make sure your workpiece is securely fastened to the surface to ensure no movement when cutting.

5


5. PREPARING TO PLUNGE CUT

Without turning the jigsaw on, place the front edge of the shoe solidly on workpiece. Align the blade with the intended cut line, but keep it above the workpiece.

6


6. CUT YOUR WORKPIECE

Using the front edge of the shoe as a pivot, turn on the jigsaw and gradually lower the blade into the workpiece. When the shoe is flat against the workpiece, proceed cutting the workpiece.

Maintenance

K23027

This power tool normally requires no maintenance; from time to time the ventilation slots on the motor casing should be cleaned out. If the unit should become defective, repair should be performed by an authorized service agent for electric tools.

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

CARING FOR THE ENVIRONMENT



When a tool is no longer usable it should not be disposed of with household waste, but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice. Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment.



Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

SPARE PARTS

For a full list of available spare parts for this item visit the Kincrome website kincrome.com.au or alternatively contact Kincrome Customer Service.

WARNING!

Do not at any time let brake fluids, gasoline, petroleum based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury.

OFFICE CONTACT DETAILS



Phone: 1300 657 528

Email: enquiries@kincrome.com.auWebsite: www.kincrome.com.au

WARRANTY



3 YEAR STANDARD
+2 FURTHER YEARS WHEN
REGISTERED ONLINE

Our goods and services come with guarantees that cannot be excluded under the Australian Consumer Law. For major failures with the service, you are entitled: -to cancel your service contract with us; and -to a refund for the unused portion, or to compensation for its reduced value. You are also entitled to choose a refund or replacement for major failures with goods. If a failure with the goods or a service does not amount to a major failure, you are entitled to have the failure rectified in a reasonable time. If this is not done you are entitled to a refund for the goods and to cancel the contract for the service and obtain a refund of any unused portion. You are also entitled to be compensated for any other reasonably foreseeable loss or damage from a failure in the goods or service. Kincrome Australia Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria (Tel 1300

657 528) also provides the Kincrome Limited Lifetime Guarantee, 5 Year Warranty, 5 Year (3+2) warranty, 3 Year Warranty, 2 Year Warranty and 12-Month Warranty (Kincrome Express Warranties) in respect of some of its products. If a product is covered by a Kincrome Express Warranty and it has materials or workmanship defects (other than defects caused by abnormal or non warranted use) which are covered under the terms of the relevant Kincrome Express Warranty, you can, at your cost, send the product to the above address for repair or replacement. Your rights under a Kincrome Express Warranty are in addition to any other rights you have under the Australian Consumer Law or other applicable laws. For further details and terms please check our product guide, visit www.kincrome.com.au or call us. Every effort is made to ensure advertised stock is available, but due to factors beyond the control of Kincrome Australia Pty. Ltd, not all products advertised in this catalogue may be available at all stores. Kincrome Australia Pty. Ltd. reserves the right to correct printing errors. All sizes shown are approximate only. Accessories shown do not come with the product unless otherwise specified. Due to printing process, colours in this catalogue may vary slightly to actual item. E. & O. E. © Copyright 2022. Reproduction in whole or in part is prohibited without written approval.