

K15300 PARTS LIST

NO.	PART NO.	DESCRIPTION	NO.	PART NO.	DESCRIPTION
1	K15300-1	BASE	37	K15300-37	CLAMP CORD
2	K15300-2	SUPPORT COLUMN	38	K15300-38	PULLEY SPINDLE
3	K15300-3	SCREW HEX HD	39	K15300-39	RETAINING RING
4	K15300-4	TUBE COLUMN	40	K15300-40	PULLEY INSERT
5	K15300-5	TABLE SUPPORT	41	K15300-41	BEARING BALL
6	K15300-6	CLAMP TABLE	42	K15300-42	SPACER
7	K15300-7	TABLE	43	K15300-43	RETAINING RING
8	K15300-8	SCREW HEX HD	44	K15300-44	POINTER
9	K15300-9	KNOB	45	K15300-45	RID-STOP
10	K15300-10	FEED HANDLE ROD	46	K15300-46	NUT-HEX
11	K15300-11	SHAFT PINION	47	K15300-47	SCREW-HEX.SOC.SET
12	K15300-12	HEX NUT	48	K15300-48	CAP SPRING
13	K15300-13	SOCKET SET SCREW	49	K15300-49	SPRING TENSION
14	K15300-14	HEX SOCKET SET SCREW	50	K15300-50	RETAINER SPRING
15	K15300-15	MOTOR ADJUST KNOB	51	K15300-51	STAR WASHER
16	K15300-16	MOTOR STOP SPRING	52	K15300-52	SCREW PAN HD.
17	K15300-17	MOTOR STOP	53	K15300-53	BOX-SWITCH W/DEPTH SCALE
19	K15300-19	ROLL PIN	54	K15300-54	SCREW PAN HD.
20	K15300-20	MOTOR	55	K15300-55	SWITCH PLATE
21	K15300-21	PULLEY MOTOR	56	K15300-56	SCREW PAN HD.
22	K15300-22	HEX SOCKET SET SCREW	57	K15300-57	SWITCH
23	K15300-23	HEX SCREW	58	K15300-58	NUT-HEX
24	K15300-24	WASHER	59	K15300-59	GASKET QUILL
25	K15300-25	LOCK NUT	60	K15300-60	BEARING BALL
26	K15300-26	HEAD	61	K15300-61	TUBE QUILL
27	K15300-27	BUSHING-RUBBER	62	K15300-62	BEARING BALL
28	K15300-28	WASHER-FOAM	63	K15300-63	WASHER
29	K15300-29	GUARD	64	K15300-64	EYE-SHIELD
30	K15300-30	V-BELT	65	K15300-65	RETAINING RING
31	K15300-31	WASHER	66	K15300-66	SHAFT SPINDLE
32	K15300-32	PAN HEAD SCREW	67	K15300-67	CHUCK
33	K15300-33	SCREW PAN	68	K15300-68	KEY-CHUCK
34	K15300-34	KNOB	69	K15300-69	WRENCH HEX"L"
35	K15300-35	MICRO SWITCH	70	K15300-70	<u>CORD&PLUG</u>
36	K15300-36	SCREW PAN HD.			