

KINCROME

PROFESSIONAL QUALITY TOOLS

UNIVERSAL SMART 9-STAGE BATTERY CHARGER & MAINTAINER 12V 25 AMP

100%
AUTOMATIC
SMART BATTERY
CHARGER &
MAINTAINER

BATTERY
CONDITION
ANALYSIS

FULLY
MICROPROCESSOR
CONTROLLED

PATENTED
BATTERY
REJUVENATION
(RECONDITIONING)

NO
TECHNICAL
EXPERIENCE
NEEDED



KP87006
ED1/Feb 18


Congratulations on purchasing the Kincrome KP87006 fully automatic switched mode battery charger, power supply, maintainer and rejuvenator. Please take the time to carefully read and understand this manual before using this product.

Table of Contents

Know Your Product 2
 IMPORTANT Safety Advice and Warnings..... 3
 Main Features 3-4
 Understanding your Product 5
 Temperature & Safety Protection..... 6
 Operating Charging Instructions..... 7-9
 Charging Curve..... 10
 Troubleshooting..... 11
 Spare Parts & Warranty..... 12

Know Your Product

1. Battery Type Selection Button
2. Charge Rate Selection Button
3. GREEN Charge Rate LEDs
4. RED Fault LED
5. BLUE Bulk LED
6. GREEN Absorption LED
7. GREEN Full LED
8. GREEN Battery Type LEDs

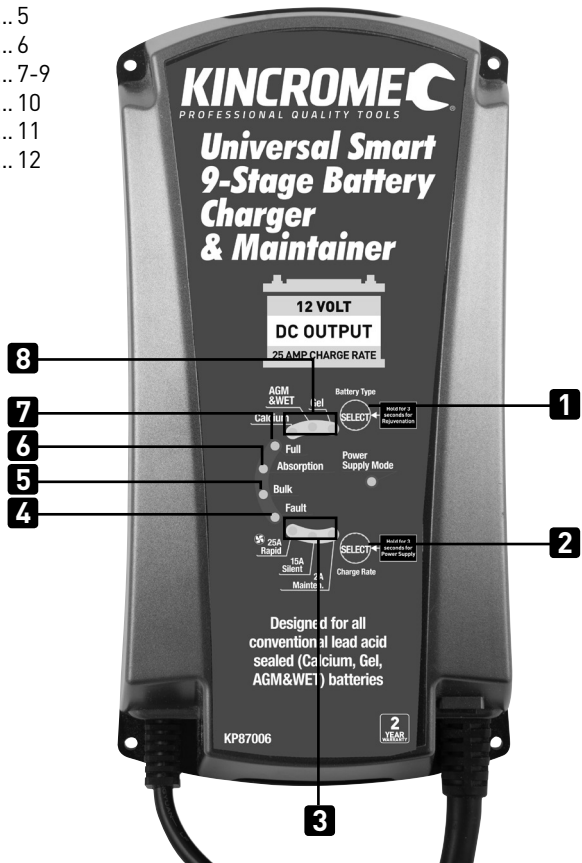

*Additional ring terminals included in pack

Specifications:

Part No:.....	KP87006
Output:	25A @ 12VDC
Input Voltage:.....	220-240AC/3.0A (380W)
Input Frequency:	50Hz
Boost Charge Voltage: ..	Gel - 14.1VDC
.....	AGM & WET - 14.4VDC
.....	Calcium - 14.7VDC
Equalising Voltage	Gel 14.3VDC
.....	AGM & WET - 14.6VDC
.....	Calcium - 15.5VDC

Float Trickle Charge Voltage:.....	13.6VDC
Start Voltage:	2VDC
Operating Temperature:	-15 to 50°C
Storage Temperature:.....	-25 to 85°C
Operating Humidity.....	90% RH Max
Temperature Compensation	-25mV/C °C
Dimensions:	279 x 141 x 67mm
Weight:	2kg
Approvals	CE, AS/NZS, EMC




IMPORTANT SAFETY ADVICE AND WARNINGS

- The charger is designed to charge and maintain **conventional lead-acid batteries only**. (VRLA), AGM, CALCIUM, GEL & WET. Not suitable for lithium type batteries.
- Always refer to the battery manufacturers specifications and recommendations if you're unsure of your battery charging requirements. Eg. Such as removing or not removing cell caps whilst charging, battery type, maximum charge rate etc..
- Explosive gases may escape from the battery during charging so please ensure the battery is charged in a well ventilated area.
- This charger is designed for indoor use only and should never be exposed to water, rain, snow, liquids etc.
- Do not attempt to use the charger if it has been dropped or damaged.
- Do not attempt to use the charger if the cables or plugs are damaged.
- If battery acid contacts your skin or clothing, wash immediately with soap and water. If acid enters your eye, immediately flush the eye with running cold water for at least 10 minutes and seek medical attention. Someone should always be within range of your voice.
- Never attempt to charge a damaged battery, frozen battery or non rechargeable battery.
- Never place the charger on the battery or battery on the charger.
- When working with lead-acid batteries, remove personal metal items such as rings, bracelets, necklaces, watches and make sure you don't short circuit the battery terminals with any type of metal tool or piece of jewellery as this will cause an explosion. You can wrap your spanner with insulation tape to minimise the risk of a short circuit.
- NEVER smoke, use an open flame or create sparks near a battery or charger during charging operation as this may cause an explosion and explosive gases.
- Do not disassemble the charger. Take it to a qualified and authorised person for repair.
- If using a generator, you must ensure you use a surge protector to protect the charger from Voltage spikes.
- The charger must not be used or played with by infirm persons or children. Also keep it away from any pets.

MAIN FEATURES

- **100% automatic smart battery charger & maintainer with reconditioning.**
- **Power Supply Mode**
- **Temperature Compensation (Sensor attached to Negative battery clamp)**
- **The battery charger is easy to use and requires NO technical experience.**
- **Fully microprocessor controlled with safety timers at every stage.**
- **Battery condition analysis.**
- **Selectable battery type.**
- **Selectable charge rate / mode.**
- **Patented battery rejuvenation (reconditioning).**
- **Battery Voltage retention analysis.**
- **Pulse charge for long term maintenance.**

- **Ultra lower power consumption (ECO Mode)**
- **Multi Stage:**
 - 1 - Qualification - Battery condition check
 - 2 - Battery rejuvenation (recondition mode)
 - 3 - Soft start charging
 - 4 - Bulk charging
 - 5 - Absorption charging
 - 6 - Equalisation charging
 - 7 - Battery analysis
 - 8 - Float mode
 - 9 - Long term maintenance pulse charge
- **Automatic diagnosis and charge:** On power up, the charger will automatically diagnose the battery condition and determine if the rejuvenation mode (reconditioning) or charge cycle is required.
- **Patented battery rejuvenation technology:** The charger has a unique and patented rejuvenation feature which uses high Voltage equalising and peak pulse reconditioning to repair sulphated batteries. This feature is fully automatic and depends on the internal impedance of the battery.
- **Can be left on 24/7 to ensure your battery is always maintained and fully charged:** The battery charger can be left unattended and left permanently connected all year round. The intelligent charger will monitor the battery Voltage and will maintain it at peak performance with a special pulse charge during long term maintenance.
- **Short circuit and reverse polarity protection**
- **Heavy-duty and corrosion-resistant output connectors**
- **Crocodile clips and ring terminals:** It comes with 2 different kinds of connectors, crocodile clips and ring terminals. The ring terminals are part of the crocodile clips. You'll need an Alan key to remove the Crocodile clips from the ring terminal if you require this connection type.
- **Rapid Charge Mode:** Uses maximum charging current to ensure the fastest charge time. You may here the fan turn ON during this mode.
- **Silent Charge Mode (Night Mode):** Charges at a reduced charge rate so the cooling fan is not required.
- **Maintenance Mode:** Ideal and recommended for long term maintenance charging or for charging smaller batteries.
- **Power Supply Mode:** Press & Hold the Charge Rate button for 3 seconds to activate and deactivate Power Supply Mode. When in Power Supply Mode, the Power Supply LED will be ON.

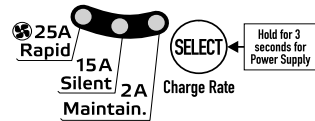


UNDERSTANDING YOUR PRODUCT

LED STATUS INDICATOR TABLE:

LED	STATUS	DESCRIPTION
BATTERY TYPE LED'S		
GREEN	ON	INDICATES WHICH BATTERY TYPE IS SELECTED
CHARGE RATE LED'S		
GREEN	ON	INDICATES WHICH CHARGE RATE / CHARGE MODE IS SELECTED
CHARGING STATUS LED'S		
FULL GREEN	FLASH/ON	FLASHING IF ANALYSIS FAILED OR ON IF FULLY CHARGED - FLOAT / MAINTENANCE MODE
ABSOR. GREEN	FLASH/ON	FLASHING DURING EQUALISATION CHARGING OR ON DURING ABSORPTION CHARGING
BULK BLUE	FLASH/ON	FAST FLASH - REJUVENATION / SLOW FLASH - SOFT START CHARGING / ON - BULK CHARGING
POWER SUPPLY	ON	UNIT IN POWER SUPPLY MODE. 25A LED WILL ALSO BE ON. NOTE: IF THE FAULT LED IS ON WHILE IN POWER SUPPLY MODE, THIS INDICATES EITHER SHORT CIRCUIT, REVERSE POLARITY OR OVERLOAD.
FAULT LED		
RED	ON	SHORT CIRCUIT/REVERSE POLARITY OR REJUVENATION FAILED IF BULK LED ALSO FLASHING SLOW
RED	FLASHING	OVER TEMPERATURE PROTECTION MODE / SOFT START CHARGING TIMED OUT IF BLUE BULK LED ALSO FLASHING FAST / BULK CHARGING TIMED OUT IF BLUE BULK LED ALSO ON

Note: If both the Battery Type and Charge Rate LED's are flashing, this means the unit is in ECO mode.

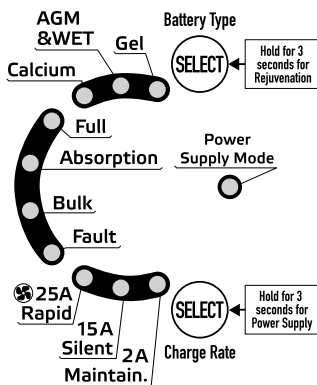

TEMPERATURE & SAFETY PROTECTION:

- **INTERNAL OVERHEAT PROTECTION:** The charger has a built-in overheat and an overload electronic circuit. This protects the charger from being damage if overheated or overloaded and will automatically decrease the charging current. Once the units internal temperature decreases to a safe level, the charger will resume normal charging.
- **SAFETY TIMER PROTECTION:** The charger has safety timers for every stage. If the battery Voltage doesn't reach a certain Voltage within a certain time, the unit will stop charging as it's highly likely that you're attempting to charge a severely discharged or heavily sulphated battery. If any of the stages time out, the charger will immediately stop charging in order to protect the battery. This will be indicated with the fault LED flashing slowly.
- **REVERSE POLARITY:** The charger has reverse polarity protection. If the charger output leads are connected reverse polarity, the fault LED will come on and the charger will be disabled. Simply unplug the charger from AC power and then connect the output leads to the correct polarity.
- **SHORT CIRCUIT PROTECTION:** The charger will automatically turn OFF if the output leads are short circuited and the fault LED will come ON. This prevents the charger from being damaged if the positive and negative crocodile clips or the optional ring terminals accidentally touch each other while the charger is turned ON.
- **ECO MODE:** This Kinchrome Battery Charger has a built in ultra low power consumption circuit. If AC power is connected and the battery is disconnected, after 10 seconds the charger will automatically go into an ECO mode. Both the selected Charge Rate and Battery Type LED's will flash GREEN to indicate ECO mode. During this mode the power drawn is less than 0.5W which totals 0.01kWh per day power consumption. If AC power is connected and the battery is connected, once the battery is fully charged and during the long term maintenance stage, the total power consumption is around 0.03kWh per day.
- **TEMPERATURE COMPENSATION:** This Kinchrome Battery Charger comes with a temperature compensation sensor attached to the Negative Battery Clamp to ensure your batteries are charged at an optimum Voltage

BATTERY TYPES & CAPACITY:

- Suits conventional lead acid batteries (VRLA) AGM, Calcium, Gel & Wet.
The Ah (Ampere Hours) capacities shown below are to be used as a general guide only. Some batteries may be able to handle a higher charge current. Refer to the battery manufacturers specifications and recommendations for your charging requirements.

Charge Rate:	2A	15A	25A
Charging	15 - 40Ah	45 - 300Ah	75 - 500Ah
Maintaining	< 120Ah	< 450Ah	< 600Ah

ELECTRICAL PARTS & ACCESSORIES:

AC Power Cord:	1.8m with SAA 3 Pin AU Plug
DC Output Lead:	1.8m with Crocodile Clips, Ring Terminals & Temp. Compensation
Charging Leads:	Crocodile Clips / Ring Terminals. Note: To use the ring terminals you'll need an Alan key to remove the bolts from the crocodile clips

OPERATING CHARGING INSTRUCTIONS:

1. Pre charge check & electrolyte level check

- Check the Battery Electrolyte levels (Not required on sealed & maintenance free batteries). If necessary, remove the vent caps and add distilled water so the levels are halfway between the upper and lower fill lines.
- Check the battery Voltage, type and Ah capacity to ensure the charger is compatible and to determine which Battery Type and Charge Rate settings you will use.
- Ensure the battery is in a well ventilated area and the charger should be as far away from the battery as the cables permit.

2. Connecting the battery charger to your battery

If the Battery is **out of the vehicle**:

- Connect the RED (+) Crocodile clip or ring terminal to the (+) battery terminal.
- Connect the BLACK (-) Crocodile clip or ring terminal to the (-) battery terminal (Fig 1).

CAUTION: The Temperature Sensor should be connected to the Negative Battery terminal.

If the battery is still **in the vehicle**, determine if the vehicle is positively or negatively earthed.

If **Negatively Earthed (Most Common)**

- FIRST Connect the RED (+) Crocodile clip or ring terminal lead to the (+) battery terminal and then connect the BLACK (-) Crocodile clip or ring terminal lead to the vehicle's chassis (Fig 2).

WARNING: DO NOT connect the BLACK (-) lead to the carburettor or fuel lines.

If **Positively Earthed**

- FIRST Connect the BLACK (-) Crocodile clip or ring terminal lead to the (-) battery terminal and then connect the RED (+) Crocodile clip or ring terminal lead to the vehicle's chassis (Fig 3).

WARNING: DO NOT connect the RED (+) lead to the carburettor or fuel lines.



**SEE QR CODE FOR
QUICK START PRODUCT VIDEO**

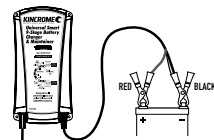


Fig 1

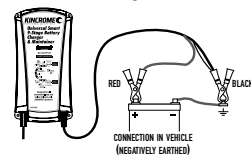


Fig 2

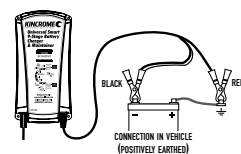


Fig 3

3. Connect the battery charger to Mains Power (220-240Vac)

- The charger will automatically start when AC power is connected and switched ON.
- **IMPORTANT:** Please make sure the correct Battery Type and your desired Charge Rate is selected to suit your battery by pressing the Select Buttons within the first 5 minutes of charging. For Example do not charge a Gel Battery on the Calcium Battery Type setting as this may damage your battery and / or reduce your battery life.
Note: If the Fault Indicator LED illuminates RED, please check your connections as it's likely that the Positive and Negative Leads are reversed.

4. The Charging Process:

- **Qualification - Battery Condition Check**
When the charger is first switched ON it checks the battery condition to determine whether the battery needs reconditioning. During this qualification process it checks the internal impedance and initial Voltage of the battery and it will determine how much charge current, if any that the battery will accept.
- **Automatic Enhanced Battery Rejuvenation - BLUE Bulk LED Flashing Fast**
If the initial qualification detected that the battery was in poor condition, the patented rejuvenation process will begin automatically. During the rejuvenation process a high Voltage equalising and peak pulse reconditioning charge is used to repair the sulphated battery. This unique patented feature will break down and dissolve the lead-sulphate crystal build up on the battery plates which will extend the life of your battery. It can also balance out high concentrations of acid. The equalisation Voltage will be 16V maximum. If the charging current detected is less than 0.1A after 24 hours, the Rejuvenation process will time out.
- **Manual Enhanced Rejuvenation Mode**
To manually rejuvenate your batteries, simply press and hold the Battery Type button for 3 seconds until the BLUE Bulk LED flashes rapidly. This mode will last for 24 Hours. To stop rejuvenation mode, press and hold the Charge Rate button for 3 seconds until the BLUE Bulk LED stops flashing rapidly.
Important Note: Please check your Battery Type and Charge Rate selection to ensure you haven't accidentally changed these settings.
- **Soft Start Charging - BLUE Bulk LED Flashing Slow**
Gently charges the battery using a reduced charge output until the battery Voltages reaches 11V. If the battery Voltage doesn't reach 11V within 6 hours, the safety timer protection will stop the unit from charging and the RED Fault LED and BLUE Bulk LED will start flashing.
- **Bulk Charging - BLUE Bulk LED ON (Charge Voltage depends on battery type selection)**
Uses the maximum selected charge output until the battery Voltage reaches the Charge Voltage specified for the selected Battery Type. If the battery Voltage doesn't

reach this within 24 hours, the safety timer protection will stop the unit from charging and the RED Fault LED will start flashing and the BLUE Bulk LED will be ON.


- **Absorption Charging - GREEN Absorption LED ON**
Uses a constant Voltage while reducing the charging output current to ensure the battery receives a full charge without overcharging the battery.
- **Equalisation Charging - BLUE Bulk LED and GREEN Absorption LED both flashing**
A well proven process that carefully overcharges the battery to restore it's full capacity. The Equalisation stage for CALCIUM Battery type selection is automatic. The Equalisation stage for AGM&WET and GEL Battery Types only occurs if the initial start Voltage is below 11V DC
- **Battery Analysis - GREEN Full LED ON**
The battery analysis stage checks the condition of the battery after the charge cycle is completed. If the battery Voltage drops too quickly during the analysis mode, this means the battery is probably faulty. If the battery analysis failed, the GREEN Full LED flashing.
- **Float Mode - Full GREEN LED ON**
This stage allows you to keep the charger connected 24/7 to ensure your battery is well maintained and kept 100% fully charged. Float mode will maintain the battery at a constant 13.6V DC.
- **Long Term Maintenance - Full GREEN LED ON**
During long term maintenance / float mode, the unit will apply a special pulse charge to ensure the battery is kept in optimal condition.

4. Disconnecting the Battery charger from Battery

- **If the Battery is out of the vehicle:**
 - (1) Switch OFF and Remove the AC Pin Plug from the outlet.
 - (2) Remove the BLACK (-) lead and then the RED (+) lead.
- **If the battery is still in the vehicle:**
 - (1) Switch OFF and Remove the AC Pin Plug from the outlet.
 - (2) Remove the BLACK (-) lead from the vehicle chassis.
 - (3) Remove the RED (+) lead from the battery.

Note: Check electrolyte levels if possible after charging as they may need topping up with distilled water (This does not apply to sealed maintenance free batteries).

CHARGING CURVE

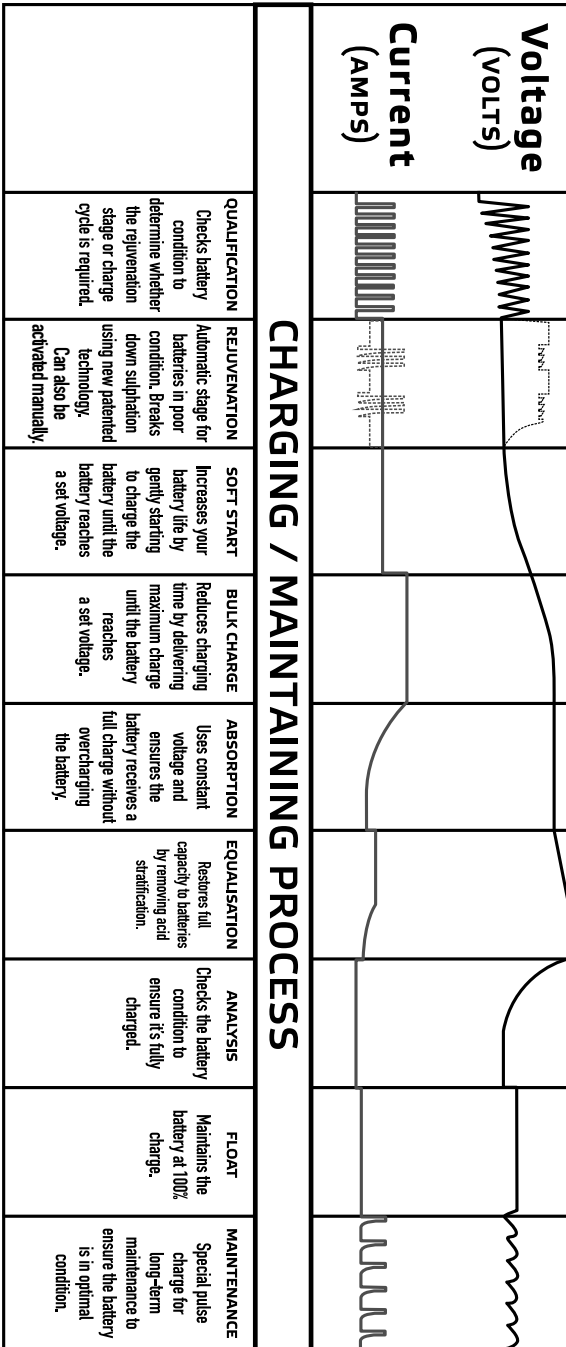

TROUBLE SHOOTING

PROBLEM	INDICATION	POSSIBLE CAUSES	SOLUTIONS
Charger does not work?	No Indicator lights on	- NO AC power	- Check AC connections and make sure the AC Power Point is switched ON. - Try a different AC Power Point which you know is working.
Charger has NO DC output?	Fault RED LED is ON	- Output is short circuited - Reverse polarity protection - Loose / bad connection to the battery	- Check DC connection between charger and battery and make sure they are not short circuited (Touching each other). - Check that the crocodile clips have not fallen off or come loose. - Check that the crocodile clips/ring terminals are connected to the correct polarity. Note: The charger output is only present when connected to a battery.
NO charging current?	Fault RED LED is Flashing	- Battery is severely sulphated - Battery has a damaged cell - Over temperature protection mode	- Check the battery condition, age etc. - Battery may need replacement. - Move battery & charger to a cooler environment.
The full / float light won't come ON.	Fault RED LED is Flashing OR Full GREEN LED is Flashing	- Battery Ah capacity too large for the battery charger and it has timed out - Battery is defective - Battery is severely sulphated	- Check the charger specifications match the battery capacity. Eg. make sure battery capacity is not too big for the charger. - Battery may need replacement. - Charge rate selected might be too low for the battery. Switch charger off and on and try again or try a higher charge rate setting providing it doesn't exceed the maximum charge limit for your battery.
NO Output in Power Supply Mode	Fault LED is ON and Power Supply LED is ON	- Output leads are Short Circuited or Reverse Polarity - Output has been overloaded	- Check output connections. - Switch off some loads to reduce load current.

In the event you believe your Battery Charger is not functioning correctly, please contact Kincrome Customer Service, (1300 657 528) before returning the item to your place of purchase. Our technical team may be able to rectify your issue over the phone.

REPLACEMENT PARTS

For the full range of replacement parts and accessories, please visit our website www.kincrome.com.au

Technical support is provided by Kincrome Tools or charger partner, OzCharge Corporation. Call Kincrome Customer Service on 1800 657 528 if assistance is required.



Warranty given by Kincrome Australia Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria (Tel 1300 657 528). The applicable warranty period (24 months) commences on the date that the product is purchased. If this product has materials or workmanship defects (other than defects caused by abnormal or non warranted use) you can, at your cost, send the product to place of purchase, an authorised Kincrome service agent or one of Kincromes addresses for repair or replacement. Your rights under this warranty are in addition to any other rights you have under the Australian Consumer Law or other applicable laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For further details please visit www.kincrome.com.au or call us. Due to minor changes in design or manufacture, the product you purchase may sometimes differ from the one shown on the packaging.

KINCROME
TOOLS + EQUIPMENT™

National Head Office
National Distribution and Showroom
3 Lakeview Dve, Caribbean Business Park
Scoresby Victoria 3179 Australia
ABN 41 007 185 006

Administration
T (03) 9730 7100 F (03) 9730 7199
E enquiries@kincrome.com.au
W kincrome.com.au

Customer Service Centre
T 1300 657 528 F 1300 556 005

Made to Kincrome Tools & Equipment Pty Ltd Global specifications and quality standards

Australia & Global	UK & EU
www.kincrome.com.au	www.kincrome.co.uk
enquiries@kincrome.com.au	enquiries@kincrome.co.uk