## K15035 parts list

| Part No. | Code | Description |
|---|---|---|
| 1 | K15035-1 | Up lift handle |
| 2 | K15035-2 | Lower lift handle |
| 3 | K15035-3 | Power socket |
| 4 | K15035-4 | Top cover |
| 5 | K15035-5 | Switch |
| 6 | K15035-6 | Power cable |
| 7 | K15035-7 | Platen power cord |
| 8 | K15035-8 | Cable sleeve |
| 9 | K15035-9 | PCB with Internal wiring |
| 10 | K15035-10 | Isobar secure cap |
| 11 | K15035-11 | NYLON cable ties |
| 12 | K15035-12 | Round frame |
| 13 | K15035-13 | Out of the wind baffle |
| 14 | K15035-14 | spring for wind baffle |
| 15 | K15035-15 | Motor cover |
| 16 | K15035-16 | Rubber ring for motor |
| 17 | K15035-17 | Motor-P |
| 18 | K15035-18 | Motor gasket |
| 19 | K15035-19 | Protect valve components |
| 20 | K15035-20 | Spong for eliminate noise |
| 21 | K15035-21 | Base for motor |
| 22 | K15035-22 | Rubber ring for motor base |
| 23 | K15035-23 | Float |
| 24 | K15035-24 | Float basket |
| 25 | K15035-25 | Float basket filters |
| 26 | K15035-26 | Barrel |
| 27 | K15035-27 | Suction Block |
| 28 | K15035-28 | Rubber ring for Suction Block |
| 29 | K15035-29 | Base |
| 30 | K15035-30 | Castor |
| 31 | K15035-31 | antistatic chain components |
| 32 | K15035-32 | Dust bag |
| 33 | K15035-33 | Metal telescopic tube |
| 34 | K15035-34 | Floor nozzle with metal plate |
| 35 | K15035-35 | Crevice nozzle |
| 36 | K15035-36 | Dust brush |
| 37 | K15035-37 | Suction hose 1.5m with two connector |

## K15035 Explosive Drawing

**Head Parts**

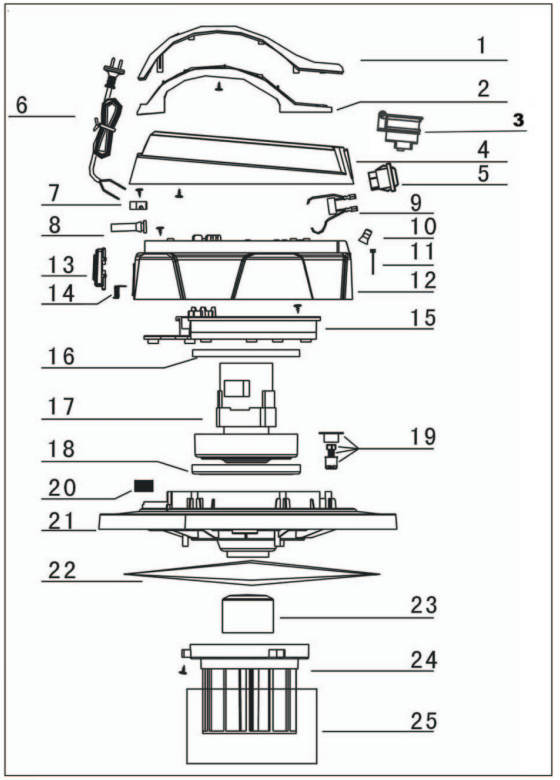


**Tank parts**

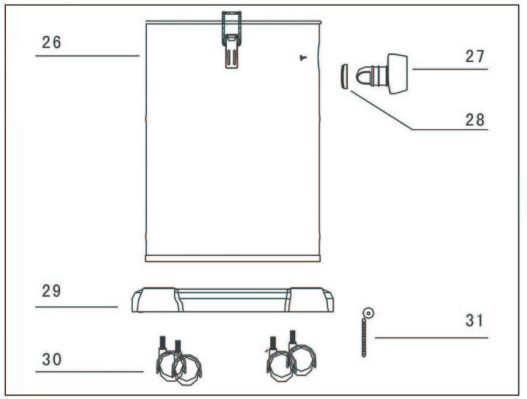

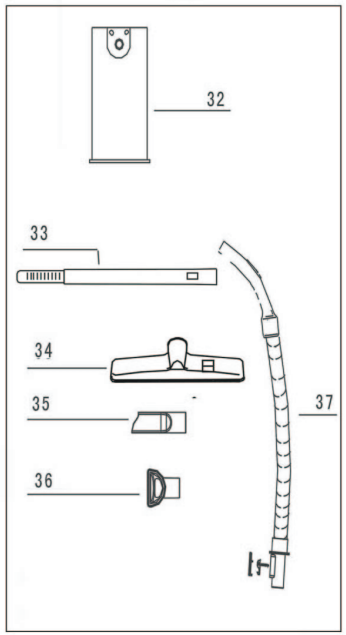
**Accessory parts**