KINCROMEC EVOLUTION

Tool Trolley 10 Drawer Wide 1052mm (41")

K7945

Operation Manual



IMPORTANT:

This operating manual contains important safety information, read carefully & understand all information before operating the trolley. Save this manual for future use.















40kg+
This product requires a two person III
-use proper lifting techniques
WARNING

Parts List





Included



Keys x 2



Trolley Handle x 1



4 x Hex 5mm Bolts for Trolley Handle



13mm x 16 Bolts (16) for Castors (with Washers)



Non-Locking Castors (2)



Locking Castors (2)



11 x Liners

Tools & Assistance Required for Trolley:



2 People



For Castors: 13mm Spanner



For Handle: 5mm Hex Key

KINCROMEC EVOLUTION

Tool Trolley 10 Drawer Wide 1052mm (41")

K7945

Assembly Instructions


1 Handle Installing

- Position the trolley side handle behind the holes on the trolley.
- Attach with (4) bolts, and tighten with a 5mm Hex Key.



- Be sure the drawers are locked and lay the trolley on its side.
- Secure castors to the unit using the 13mm bolts provided.
- Tighten with a 13mm Spanner.
- Repeat this process for the castors on the opposite of the trolley.
- Return the trolley to its upright position.

Caution: Do not over tighten the bolts. **Caution:** Both locking castors must be fitted to front of trolley.

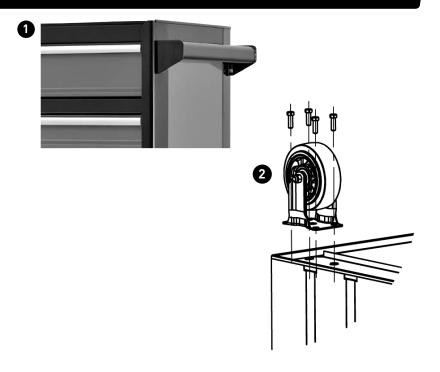


Maintenance

1 Removing the Drawers

- Fully extend the empty drawer.
- Push up the right grey release lever while pushing down the left grey release lever.
- Pull the drawer outward until it is released from the drawer slide.

2 Re-Inserting The Drawers

- Extend the drawer slides.
- Insert the brackets on each side of the drawer into the slots on the slides, being careful that they are properly positioned.
- Once properly inserted, completely close the drawer to set the slides in their proper positions.
- Periodically tighten all hardware
- Periodically lubricate castors
- Lubricate the slides twice a year
- Lubricate the lock with graphite annually
- Use a damp Microfibre cloth to clean all surfaces

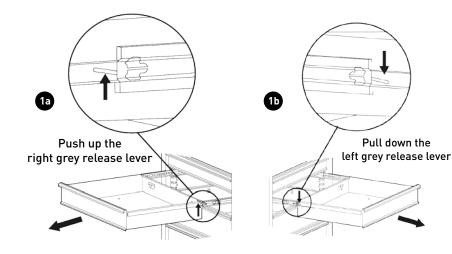

KINCROMEC EVOLUTION

Tool Trolley 10 Drawer Wide 1052mm (41")

K7945

Parts List



Spare Parts

ITEM	PART NO.	DESCRIPTION	QUANTITY
1	K7999-10	Lock & Key	1
2	K7999-11	Key Only (Specify Number)	1
3	K7999-12	Trolley Handle	1
4	K7999-8	Ball Bearing Slide (Pair)	7

ITEM	PART NO.	DESCRIPTION	QUANTITY
5	K7999-26	Eva Mat Pack 11 Pce	1
6	K7999-13	Castor Swivel x 1	2
7	K7999-14	Castor Swivel x 1 (Brake)	2
8	K7999-15	Castor Bolt Pack	1

National Head Office

ABN 41 007 185 006

National Distribution and Showroom 3 Lakeview Dve, Caribbean Business Park Scoresby Victoria 3179 Australia

Administration

T (03) 9730 7100 F (03) 9730 7199

E enquiries@kincrome.com.au W kincrome.com.au

Customer Service Centre T 1300 657 528 F 1300 556 005

Made to Kincrome Tools & Equipment Pty Ltd Global specifications and quality standards in China Kincrome UK Ltd PO Box 468 Southampton SO30 9EP

Australia & Global	UK & EU
www.kincrome.com.au	www.kincrome.co.uk
enquiries@kincrone.com.au	enquiries@kincrone.co.uk