KINCROME EVOLUTION

# Tool Trolley

5 Drawer
675mm (26")

K7925

## Operation Manual

**IMPORTANT:** This operating manual contains important safety information, read carefully & understand all information before operating the trolley. Save this manual for future use.




Do not open more than one drawer at a time. | Do not step on drawers. | Do not let children near the Toolbox. | Do not separate Chest from Trolley. | Do not exceed Drawer Load Limit | Not suitable for mounting in Vehicles | Lock drawers and lid before moving the Toolbox.




## Parts List




**Measurements:** **Weight: 42kg**
(External - With Castors - 125 x 50mm (5 x 2") x2 Locking)

| | | | | | |
|---|---|---|---|---|---|
| **WIDTH** | 675 mm | **DEPTH** | 466 mm | **HEIGHT** | 801 mm |

**Measurements - Top Section**

| | | | | | |
|---|---|---|---|---|---|
| **WIDTH** | 665 mm | **DEPTH** | 466 mm | **HEIGHT** | 15 mm |

**Shallow Drawers**

| | | | | | |
|---|---|---|---|---|---|
| **WIDTH** | 566 mm | **DEPTH** | 405 mm | **HEIGHT** | 62 mm |

**Deep Drawers**

| | | | | | |
|---|---|---|---|---|---|
| **WIDTH** | 566 mm | **DEPTH** | 405 mm | **HEIGHT** | 143 mm |

## Included


Keys x 2



Trolley Handle x 1


4 x Hex 5mm Bolts for Trolley Handle


13mm x 16 Bolts (16) for Castors (with Washers)


Non-Locking Castors (2)



Locking Castors (2)

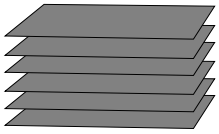
6 x Liners

**Tools & Assistance Required for Trolley:**


**2 People**


**For Castors:** 13mm Spanner


**For Handle:** 5mm Hex Key

KINCROME EVOLUTION

# Tool Trolley

5 Drawer
675mm (26")

K7925

## Assembly Instructions

**1 Handle Installing**

- Position the trolley side handle behind the holes on the trolley.
- Attach with (4) bolts, and tighten with a 5mm Hex Key.

1




**2 Castor Installing (If applicable)**

- Be sure the drawers are locked and lay the trolley on its side.
- Secure castors to the unit using the 13mm bolts provided.
- Tighten with a 13mm Spanner.
- Repeat this process for the castors on the opposite of the trolley.
- Return the trolley to its upright position.

**Caution:** Do not over tighten the bolts.
**Caution:** Both locking castors must be fitted to front of trolley.

2

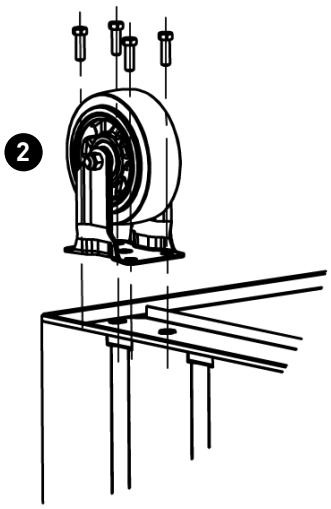


## Maintenance


**1 Removing the Drawers**

- Fully extend the empty drawer.
- Push up the right grey release lever while pushing down the left grey release lever.
- Pull the drawer outward until it is released from the drawer slide.

1a

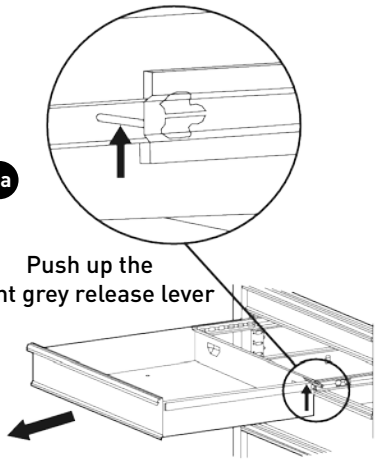


1b

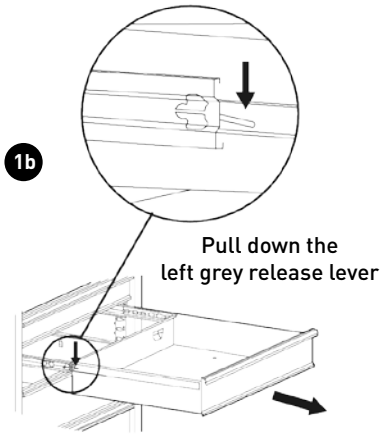


**2 Re-Inserting The Drawers**

- Extend the drawer slides.
- Insert the brackets on each side of the drawer into the slots on the slides, being careful that they are properly positioned.
- Once properly inserted, completely close the drawer to set the slides in their proper positions.

- Periodically tighten all hardware
- Periodically lubricate castors
- Lubricate the slides twice a year
- Lubricate the lock with graphite annually
- Use a damp Microfibre cloth to clean all surfaces

KINCROME EVOLUTION

# Tool Trolley

5 Drawer
675mm (26")

K7925

## Parts List




## Spare Parts

| ITEM | PART NO. | DESCRIPTION | QUANTITY |
|---|---|---|---|
| 1 | K7999-10 | Lock & Key | 1 |
| 2 | K7999-11 | Key Only (Specify Number) | 1 |
| 3 | K7999-12 | Trolley Handle | 1 |
| 4 | K7999-8 | Ball Bearing Slide (Pair) | 5 |

| ITEM | PART NO. | DESCRIPTION | QUANTITY |
|---|---|---|---|
| 5 | K7999-25 | Eva Mat Pack 6 Pce | 1 |
| 6 | K7999-13 | Castor Swivel x 1 | 2 |
| 7 | K7999-14 | Castor Swivel x 1 (Brake) | 2 |
| 8 | K7999-15 | Castor Bolt Pack | 1 |


National Head Office
National Distribution and Showroom
3 Lakeview Dve, Caribbean Business Park
Scoresby Victoria 3179 Australia
ABN 41 007 185 006

Administration
T (03) 9730 7100 F (03) 9730 7199
E enquiries@kincrome.com.au
W kincrome.com.au

Customer Service Centre
T 1300 657 528 F 1300 556 005



Made to Kincrome Tools & Equipment Pty Ltd Global specifications and quality standards in China
Kincrome UK Ltd PO Box 468 Southampton SO30 9EP

| Australia & Global | UK & EU |
|---|---|
| www.kincrome.com.au | www.kincrome.co.uk |
| enquiries@kincrome.com.au | enquiries@kincrome.co.uk |