## KINCROMEC EVOLUTION

# Tool Trolley 7 Drawer Deep 675mm (26")

K7927

#### **Operation Manual**



**IMPORTANT:** 

This operating manual contains important safety information, read carefully & understand all information before operating the trolley. Save this manual for future use.

















#### **Parts List**



Measurements: Weight: 51.3kg (External - With Castors - 125 x 50mm (5 x 2") x2 Locking)					
WIDTH	675 mm	DEPTH	466 mm	HEIGHT	963 mm
Measurements - Top Section					
WIDTH	665 mm	DEPTH	466 mm	HEIGHT	15 mm
Shallow Drawers					
WIDTH	566 mm	DEPTH	405 mm	HEIGHT	62 mm
Deep Drawers					
WIDTH	566 mm	DEPTH	405 mm	HEIGHT	143 mm

#### Included



Keys x 2 Trolley Handle x 1



4 x Hex 5mm Bolts for Trolley Handle




13mm x 16 Bolts (16) for Castors (with Washers)



Non-Locking Castors (2)



Locking Castors (2)



8 x Liners

Tools & Assistance Required for Trolley:



2 People



**For Castors:** 13mm Spanner



**For Handle:** 5mm Hex Key

### KINCROMEC EVOLUTION

# Tool Trolley 7 Drawer Deep 675mm (26")

K7927

### **Assembly Instructions**


#### 1 Handle Installing

- Position the trolley side handle behind the holes on the trolley.
- Attach with (4) bolts, and tighten with a 5mm Hex Key.



- Be sure the drawers are locked and lay the trolley on its side.
- Secure castors to the unit using the 13mm bolts provided.
- Tighten with a 13mm Spanner.
- Repeat this process for the castors on the opposite of the trolley.
- Return the trolley to its upright position.

**Caution:** Do not over tighten the bolts. **Caution:** Both locking castors must be fitted to front of trolley.

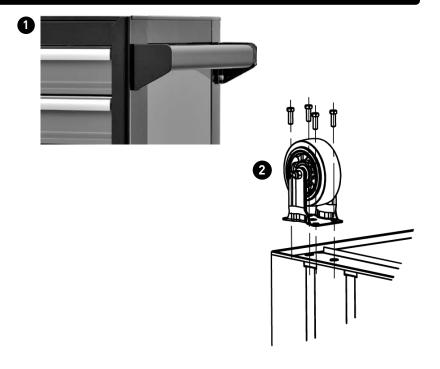


#### Maintenance

#### 1 Removing the Drawers

- Fully extend the empty drawer.
- Push up the right grey release lever while pushing down the left grey release lever.
- Pull the drawer outward until it is released from the drawer slide.

#### 2 Re-Inserting The Drawers

- Extend the drawer slides.
- Insert the brackets on each side of the drawer into the slots on the slides, being careful that they are properly positioned.
- Once properly inserted, completely close the drawer to set the slides in their proper positions.
- Periodically tighten all hardware
- Periodically lubricate castors
- Lubricate the slides twice a year
- Lubricate the lock with graphite annually
- Use a damp Microfibre cloth to clean all surfaces

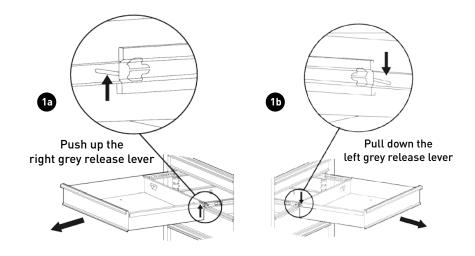

## KINCROMEC EVOLUTION

# Tool Trolley 7 Drawer Deep 675mm (26")

K7927

#### **Parts List**



### **Spare Parts**

ITEM	PART NO.	DESCRIPTION	QUANTITY
1	K7999-10	Lock & Key	1
2	K7999-11	Key Only (Specify Number)	1
3	K7999-12	Trolley Handle	1
4	K7999-8	Ball Bearing Slide (Pair)	7

ITEM	PART NO.	DESCRIPTION	QUANTITY
5	K7999-26	Eva Mat Pack 8 Pce	1
6	K7999-13	Castor Swivel x 1	2
7	K7999-14	Castor Swivel x 1 (Brake)	2
8	K7999-15	Castor Bolt Pack	1

#### National Head Office

ABN 41 007 185 006

National Distribution and Showroom 3 Lakeview Dve, Caribbean Business Park Scoresby Victoria 3179 Australia

Administration

T (03) 9730 7100 F (03) 9730 7199

E enquiries@kincrome.com.au W kincrome.com.au

Customer Service Centre T 1300 657 528 F 1300 556 005

Made to Kincrome Tools & Equipment Pty Ltd Global specifications and quality standards in China Kincrome UK Ltd PO Box 468 Southampton SO30 9EP

Australia & Global	UK & EU
www.kincrome.com.au	www.kincrome.co.uk
enquiries@kincrone.com.au	enquiries@kincrone.co.uk